



SINGLE FUNCTION REMOTE OPERATING GUIDE

1. On all systems with remote operation, you must activate the control box. To switch on/off (power up or power down), both buttons one and two must be depressed on the fob, **or** on the control box simultaneously.
2. To cover the truck body or trailer, press close on the remote module or keyfob.
3. To uncover the truck body or trailer, press open on the remote module or keyfob.

**Press and hold
for 6 seconds**

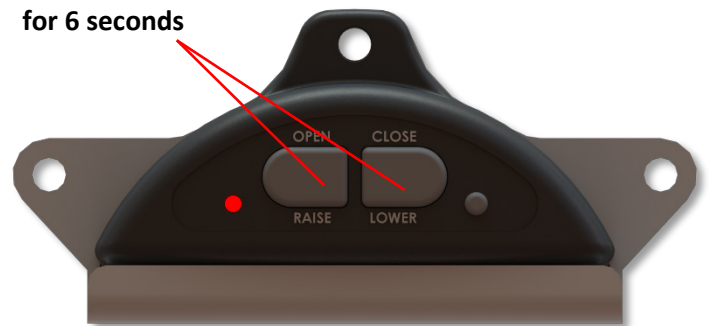


Figure 1: Remote Module

KEYFOB PROGRAMMING

1. Once you have all remotes you wish to program ready. Make sure the Remote Module is on (see above).
2. Push and hold the small round button and the large OPEN/RAISE button simultaneously for 6 seconds. The light will flash rapidly.
3. Press the top left button on the first keyfob to be programmed for 1 second (Figure 2: Keyfob button press). The red light will stop flashing momentarily, then begin flashing once again.
4. Repeat step 3 for all keyfobs'. Then let rest till module goes back into standby mode.

Press for one Second



Figure 2: Keyfob button press

AUTO SHUTOFF PROGRAMMING

1. Pressing small button and large right button will enter timer programming mode. After entering programming mode, the led will flash the number or times for the cycle it is in. Please see the table below for the different programming options.
2. To increase the time, press the left large button and to decrease the time press the large right button the LED will flash accordingly. The unit will time out of programming mode after 10 seconds of no activity. We have set the default time to on indefinitely.

Table 1: Programmable Shutoff Times

LED Flash	On Time before auto shutdown
1	On Indefinitely (default)
2	2 minute on time
3	4 minute on time
4	6 minute on time
5	8 minute on time
6	10 minute on time

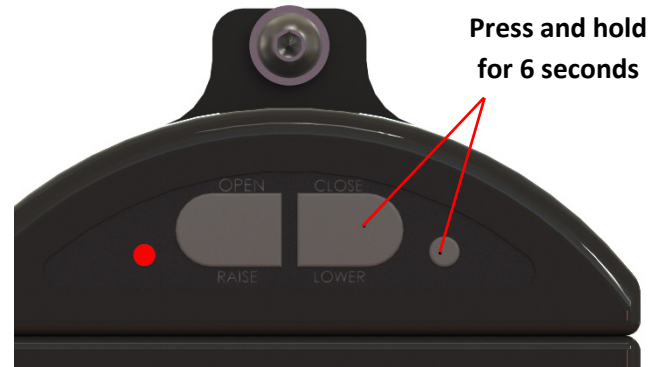


Figure 3: Auto Shutoff Initiation