


STANDALONE BATTERY UNIT OVERVIEW - ROLL RITE D6

NOTE: BELOW DIAGRAM IS FOR VISUAL REFERENCE ONLY. ALL RELEVANT INFORMATION IS ON THE RIGHT

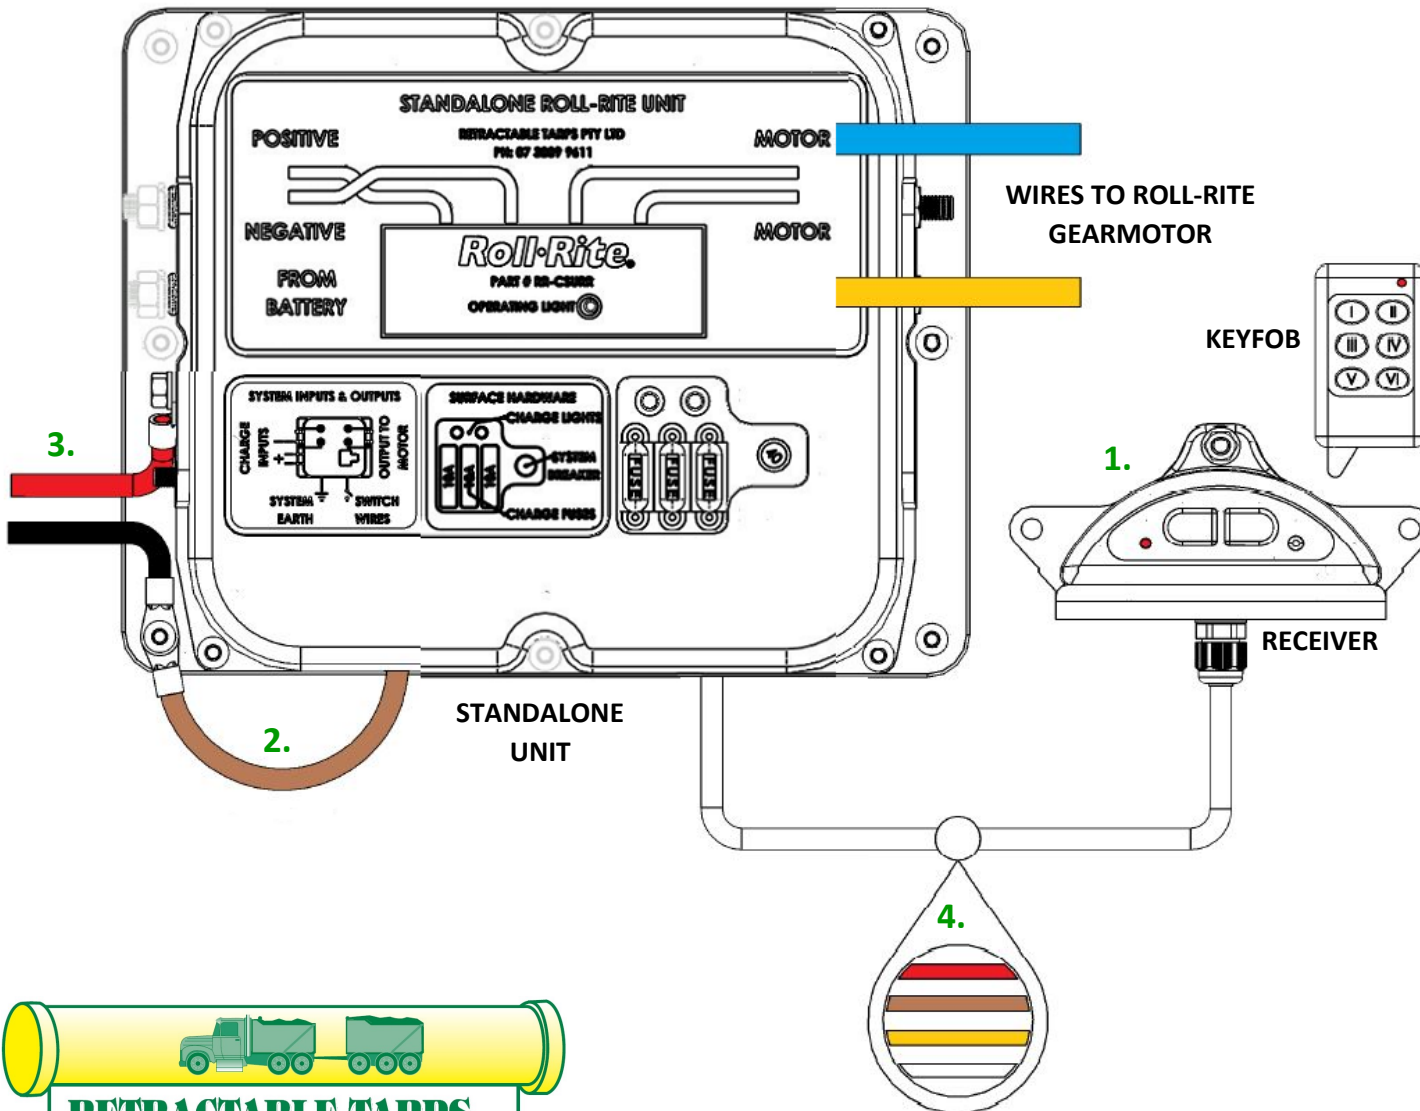

QUICK START GUIDE

Thank you for purchasing Retractable Tarps' Complete Standalone Battery Unit. Key points when first installing and starting up the unit are as follows:

1. Roll Rite Receiver **must** be turned on prior to first use. Hold both large buttons on receiver. **OR** buttons 1 and 2 on your keyfob until the receiver module red light turns on.
2. System earth must have a clean and strong connection to the vehicles chassis or equivalent.
3. The Standalone Unit will require the following Amperage rated charge inputs:
 - 2 Fuse Unit:** 6 Amps on single terminal
 - 3 Fuse Unit:** 3 Amps per terminal
 Input(s) should be drawn from the vehicles clearance lights or directly from the vehicle's batteries. Both can be used if a 3 fuse, dual input unit is purchased. **NOTE**, a 10 Amp rated fuse must be placed close to vehicle batteries if charge wire is direct from the battery.
4. If Roll Rite receiver is unavailable, system switch wires are colour coded as follows:
 - Red:** Common Power
 - Brown:** Receiver negative (not required for a physical switch)
 - Yellow:** Switch Direction 1
 - White:** Switch Direction 2
 These can be wired to an in-cab rocker switch or external switch on the body.

FOR ADDITIONAL TECHNICAL ASSISTANCE:

28-30 Terrence Road Brendale QLD 4500
PO Box 5623, Brendale QLD 4500
Phone 07 3889 9611, Fax 07 3889 9622
Email: sales@retractabletarps.com.au